


# WASCHPLÄTZE M3 CURVE POSITION ANSCHLÜSSE

Höhe 500mm

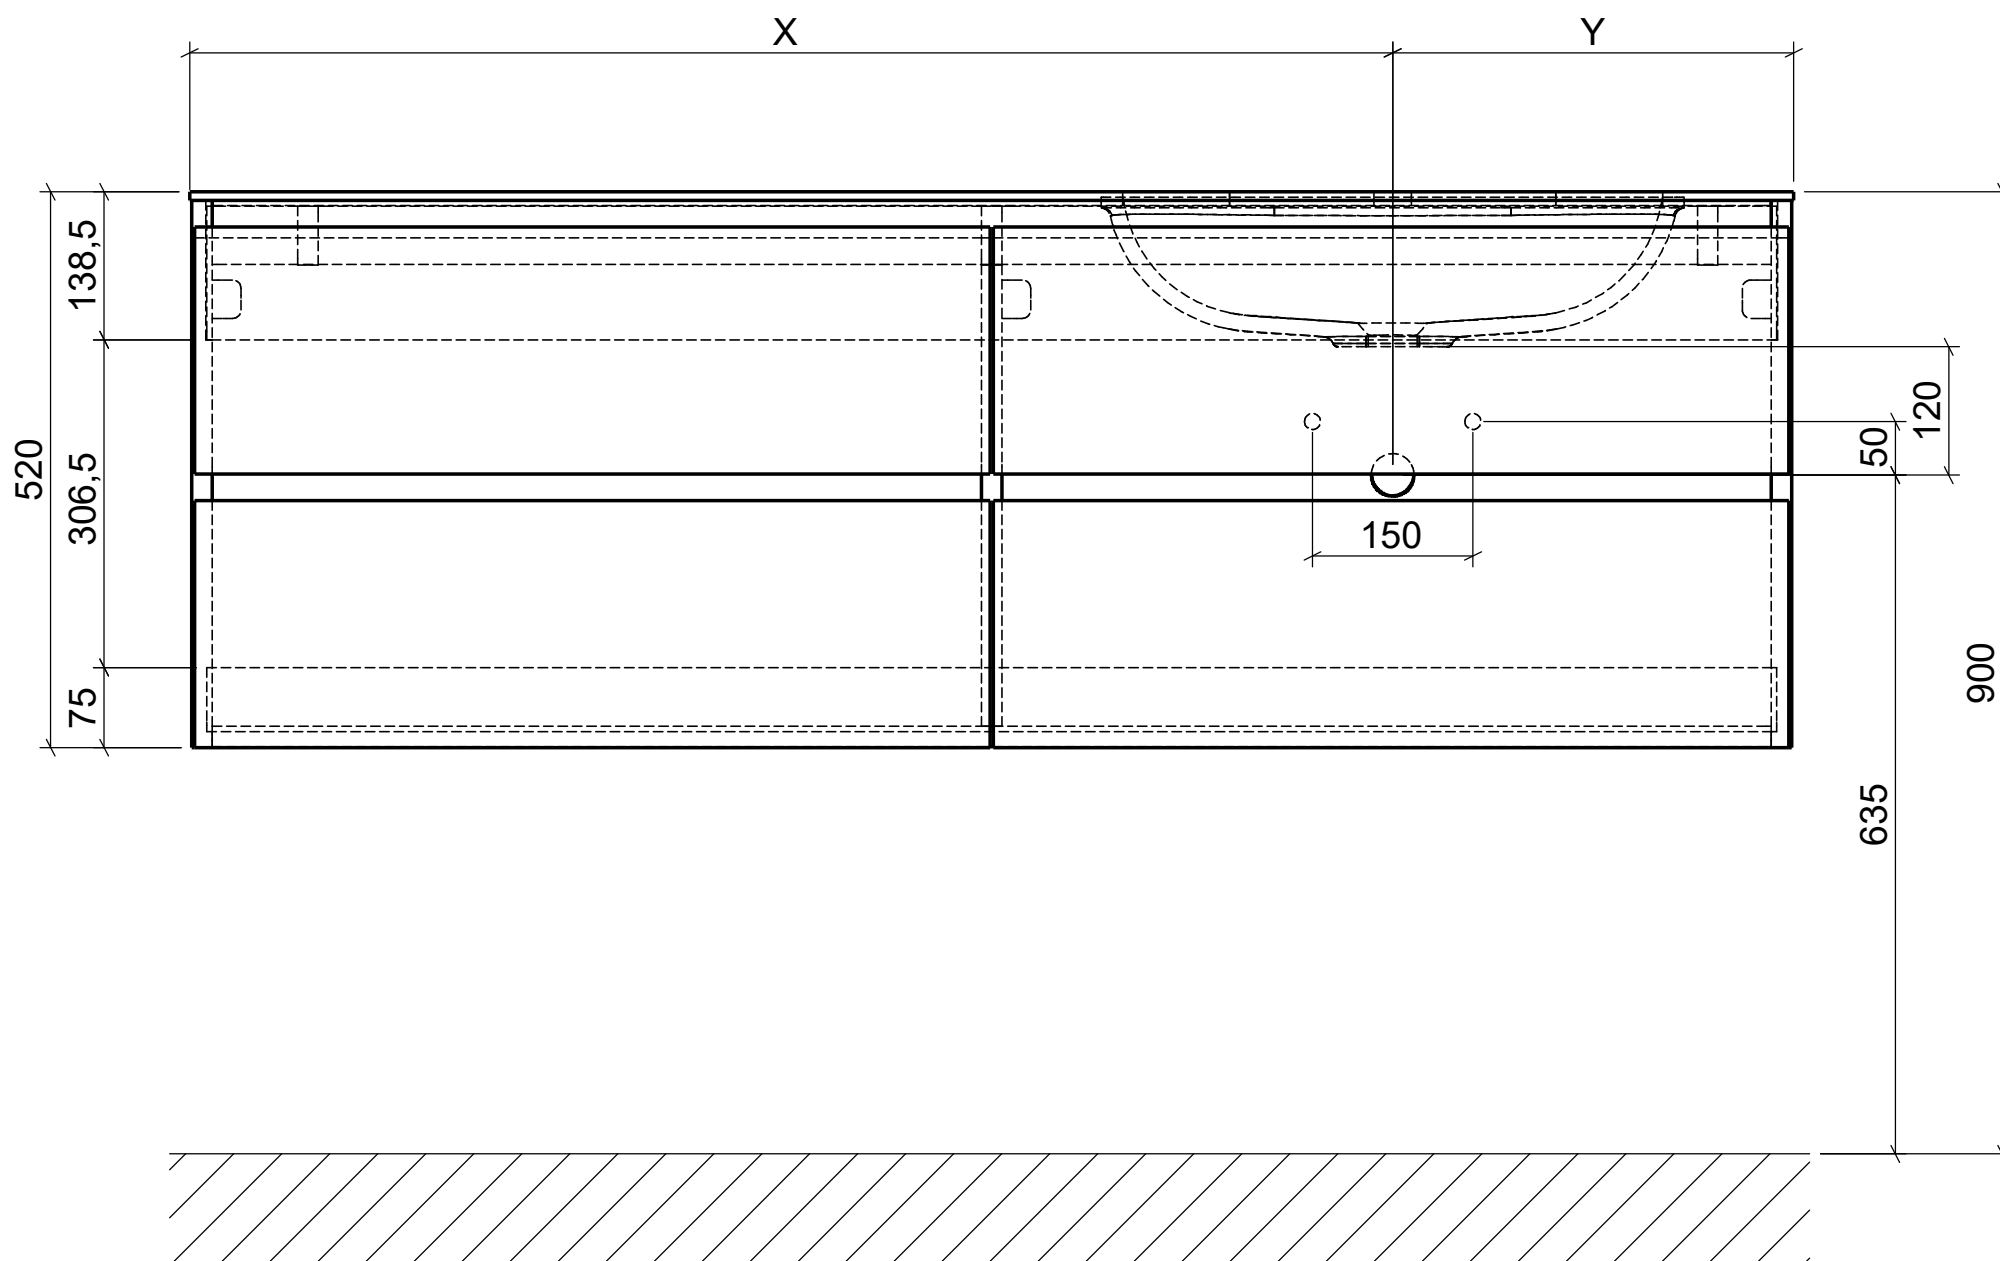

	X	Y
WP 700500-2AUSÜCU	350mm	350mm
WP 800500-2AUSÜCU	400mm	400mm
WP 900500-2AUSÜCU	450mm	450mm
WP 1000500-2AUSÜCU	500mm	500mm
WP 1200500-2AUSÜCU	600mm	600mm
WP 1200500-4AUSNCUL	300mm	900mm
WP 1400500-4AUSNCUL	350mm	1050mm
WP 1500500-4AUSNCUL	375mm	1125mm
WP 1600500-4AUSNCUL	400mm	1200mm
WP 1800500-4AUSNCUL	450mm	1350mm
WP 1200500-4AUSNCUR	900mm	300mm
WP 1400500-4AUSNCUR	1050mm	350mm
WP 1500500-4AUSNCUR	1125mm	375mm
WP 1600500-4AUSNCUR	1200mm	400mm
WP 1800500-4AUSNCUR	1350mm	450mm
WP 1000500-4AUSACUL	350mm	650mm
WP 1200500-4AUSACUL	400mm	800mm
WP 1000500-4AUSACUR	650mm	350mm
WP 1200500-4AUSACUR	800mm	400mm

PFLEGEHINWEISE UND MONTAGEANLEITUNGEN FINDEN SIE AUF UNSERER HOMEPAGE  
 CARE INSTRUCTIONS AND ASSEMBLY INSTRUCTIONS YOU WILL FIND IN OUR HOMEPAGE  
[WWW.DOMOVARI.DE](http://WWW.DOMOVARI.DE)  
 +49 (0)2151/155090  
[MAIL@DOMOVARI.DE](mailto:MAIL@DOMOVARI.DE)

